
REFERENCE TABLE (DOUBLE CONTROL BOARD)


OPERATOR	х	у	Z	LENGTH MAXIMUM LEAF
PISTON 1/4 (STANDARD)	6.30 in (160 mm)	6.30 in (160 mm)	1.97 in (50 mm)	59.05 in (1500 mm)
PISTON 1/4 (SUPER)	10.63 in (270 mm)	10.63 in (270 mm)	1.97 in (50 mm)	98.42 in (2500 mm)
PISTON 1/3 CONDOMINIUM AND PIVO (STANDARD)	7.48 in (190 mm)	7.48 in (190 mm)	1.97 in (50 mm)	78.74 in (2000 mm)
PISTON 1/3 CONDOMINIUM AND PIVO (SUPER)	14.57 in (370 mm)	14.57 in (370 mm)	1.97 in (50 mm)	137.79 in (3500 mm)
PISTON 1/3 CONDOMINIUM AND PIVO (MEGA)	15.75 in (400 mm)	15.75 in (400 mm)	1.97 in (50 mm)	177.16 in (4500 mm)

Maximum size allowed for standard installation.

INTERNAL OPENING (DOUBLE CONTROL BOARD)



EXTERNAL OPENING (DOUBLE CONTROL BOARD)



SWING OPERATORS





EXTERNAL OPENING

CLOSED

HOUSE




SUPPORT FOR PPA DELAY MECHANICAL

Measure for plate installation

INTERNAL OPENING (WITH A MECHANICAL DELAY)

EXTERNAL OPENING (WITH A MECHANICAL DELAY)

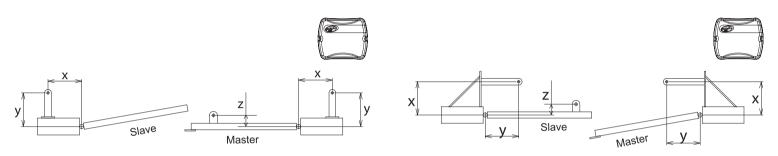

SUPPORT MEASURES FOR INSTALLATION PIVOTING PISTON WITH DELAY MECHANICAL											
OPERATOR	SLAVE LEAF Internal or external opening			Length	MASTER LEAF						
	Х	у	Z	MaximumSheet	Х	у	z				
PIVO PISTON 1/4 STD		5.90 in (150 mm)			6.30 in (160 mm)	6.30 in (160 mm)					
PIVO PISTON 1/4 SUPER		10.24 in (260 mm)			10.63 in (270 mm)	10.63 in (270 mm)	1.97 in (50 mm)				
PISTON 1/3 STD PIVO CONDOMINIUM STD		7.08 in (180 mm)			7.48 in (190 mm)	7.48 in (190 mm)	1.97 in (50 mm)				
PIVO PISTON 1/3 SUPER PIVO PISTON CONDOMINIUM SUPER		14.17 in (360 mm)			14.57 in (370 mm)	14.57 in (370 mm)	1.97 in (50 mm)				
PIVO PISTON 1/3 MEGA PIVO PISTON CONDOMINIUM MEGA		15.35 in (390 mm)			15.75 in (400 mm)		1.97 in (50 mm)				

Maximum size allowed for standard installation.